


PETOL™ DRILL PIPE TONG™ - DA1344 Parts List

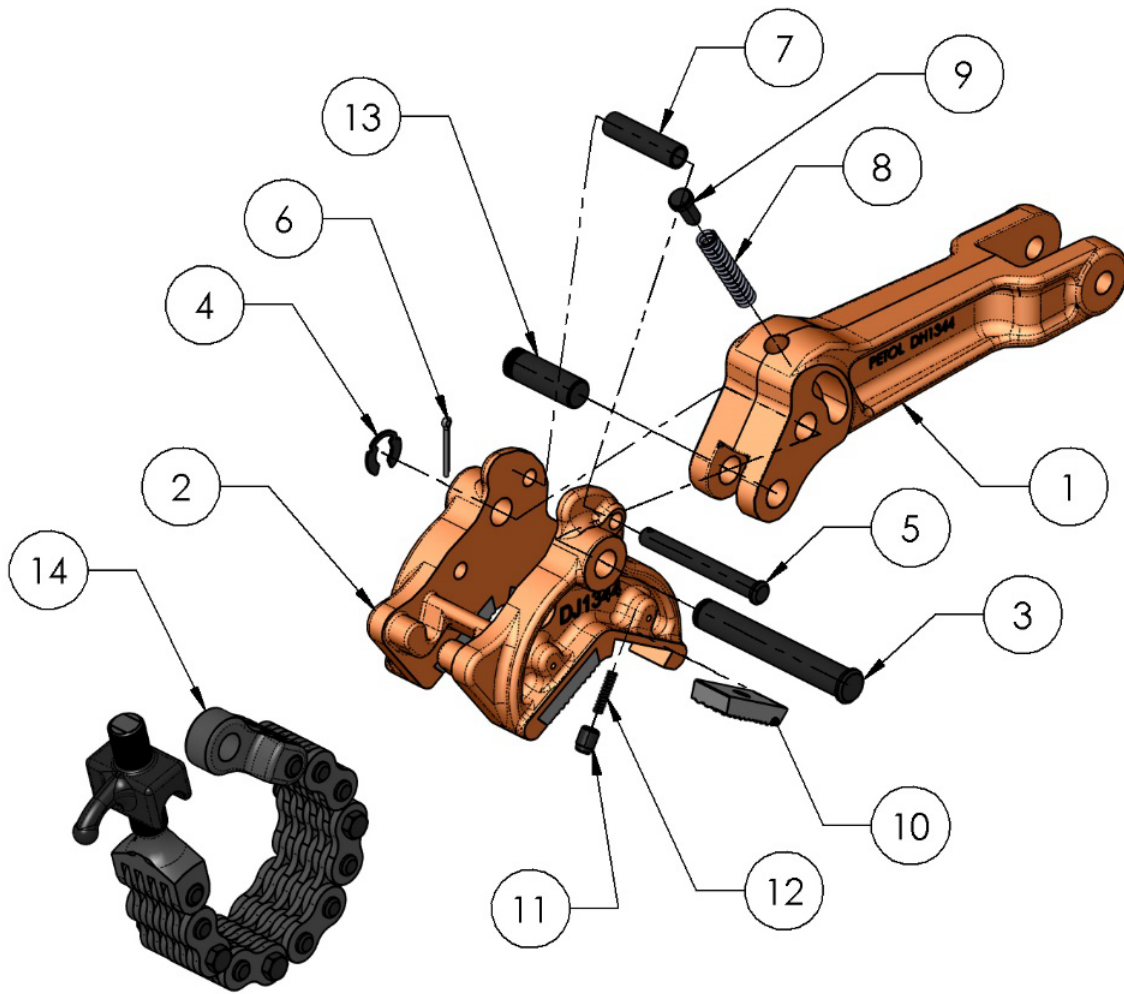

| Item | Qty | Part Number | Description |
|------|-----|-------------|--|
| 1 | 1 | DH1344 | Handle |
| 2 | 1 | DJ1344 | Jaw |
| 3 | 1 | HP054 | Jaw – handle pin w/ klipring |
| 4 | 1 | HXKR062 | Klipring only |
| 5 | 1 | HP056 | Spring pin w/ cotter |
| 6 | 1 | HXC001 | Cotter pin only |
| 7 | 1 | HU74 | Spring pin bushing |
| 8 | 1 | HS01 | Spring |
| 9 | 1 | HG03 | Spring guide |
| 10 | 4 | HI08D | Diamond point insert |
| 11 | 4 | HP902 | Insert key |
| 12 | 4 | HS20SS | Insert key spring |
| 13 | 1 | HP053 | Master link – handle pin |
| 14 | 1 | * | Chain assembly (see next page for parts) |


*See Chain Guide on product web page



4450 S. Hwy. 6 | P.O. Box 192
Clifton, TX 76634 | USA
www.PETOL.com

sales@petol.com | 254.675.8651

PETOL™ DRILL PIPE TONG™ - DA1344 Parts List

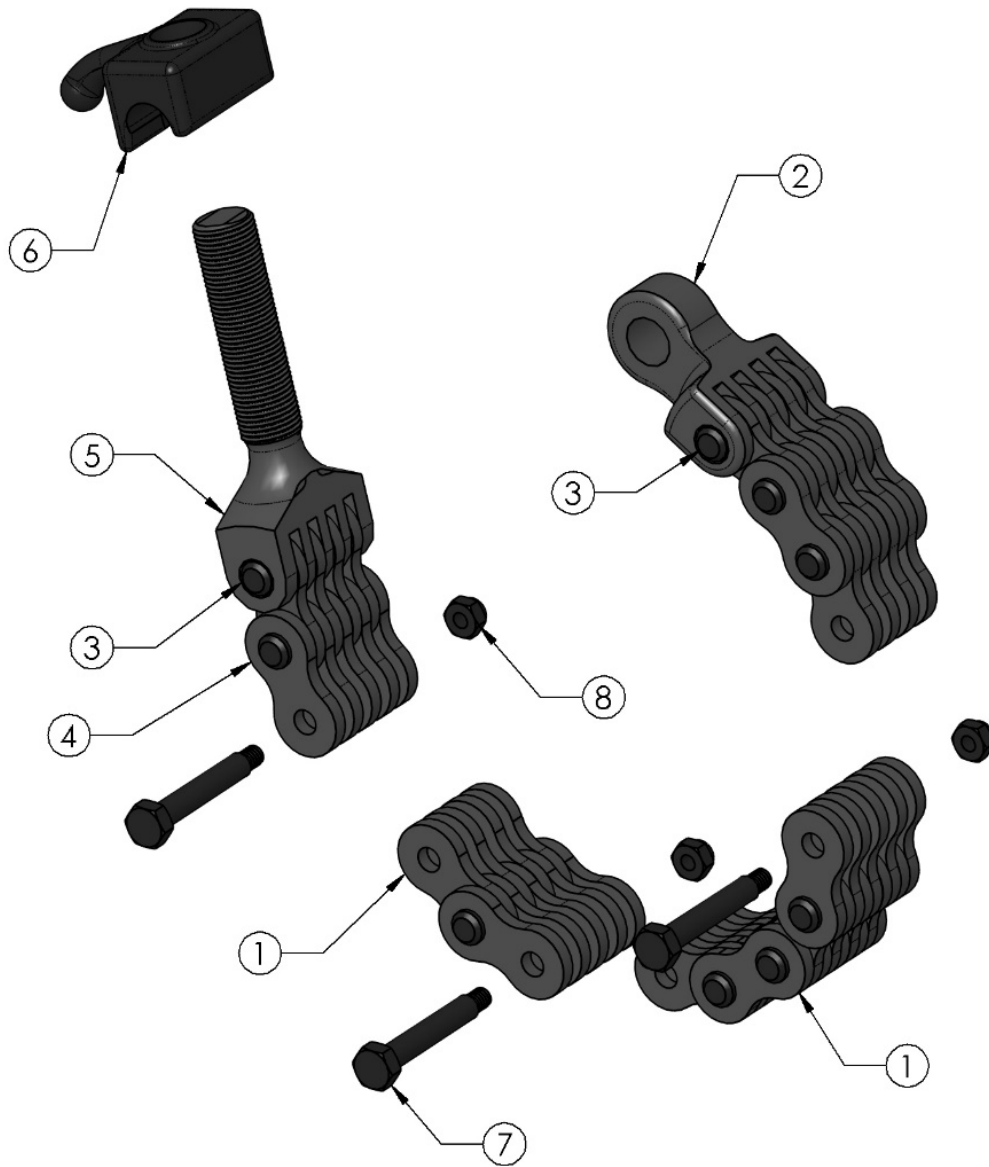

| Item | Part Number | Description |
|------|----------------|----------------------|
| 1 | 131-45-02 | Special chain only |
| 1 | 131-45-03 | Special chain only |
| 1 | 131-45-04 | Special chain only |
| 2 | HM03-45 | Master link |
| 3 | HP055 | Rivet |
| 4 | 131-45-02-HV09 | Chain screw assembly |
| 5 | HV09-45 | Chain screw only |
| 6 | HN09 | Chain screw nut |
| 7 | HB63 | Splice bolt with nut |
| 8 | HXN052 | Splice nut only |



4450 S. Hwy. 6 | P.O. Box 192
 Clifton, TX 76634 | USA
www.PETOL.com

sales@petol.com | 254.675.8651